



*Fig. 1 · Type 3374 Actuator mounted on Type 3535 Three-way Valve*

## **Mounting and Operating Instructions**

**EB 8331-1 EN**

Edition March 2004

Contents		Page
<b>1</b>	<b>Design and principle of operation</b>	3
1.1	Additional equipment	3
1.2	Technical data	4
<b>2</b>	<b>Installation</b>	6
2.1	Mounting position	6
2.2	Attachment to the valve	6
<b>3</b>	<b>Electrical connections</b>	8
<b>4</b>	<b>Operation and adjustment</b>	10
4.1	Manual operation of the actuator	10
4.2	Adjustment of additional equipment	10
4.2.1	Limit switches	10
4.2.2	Potentiometers	10
4.3	Setting the digital positioner	12
<b>5</b>	<b>Retrofitting additional electrical equipment</b>	15
5.1	Limit switches	16
5.2	Potentiometers	18
5.3	Digital positioner	19
<b>6</b>	<b>Dimensions in mm</b>	20



- ▶ *The device may only be assembled, started up or operated by trained and experienced personnel familiar with the product. According to these mounting and operating instructions, trained personnel is referred to as individuals who are able to judge the work they are assigned to and recognize possible dangers due to their specialized training, their knowledge and experience as well as their knowledge of the applicable standards.*
- ▶ *Any hazards which could be caused in the attached control valve by the process medium, the operating pressure and moving parts are to be prevented by means of the appropriate measures.*
- ▶ *The actuators are designed for use in electrical power systems. For wiring and maintenance, you are required to observe the relevant safety regulations. Only use power interruption devices which are protected against unintentional reconnection of the power supply. Take special care when making adjustments on live parts. Do not remove covers!*
- ▶ *Proper shipping and appropriate storage are assumed.*

## 1 Design and principle of operation

The Type 3374 Electric Actuator is used in industrial plants as well as in heating, ventilation and air-conditioning systems.

The linear actuator is suitable for form-fit attachment to various SAMSON valve series, depending on the version with or without fail-safe action.

The actuators consist of a reversible synchronous motor and a maintenance-free planetary gear with ball screw.

The synchronous motor is switched off by torque-dependent switches when the final positions are reached or in case of an overload.

The motion is transmitted to the actuator stem by the gears and ball screw.

Actuator versions with integrated yoke are primarily used for attachment to Type 3260 (DN 65 to 150), Type 3214 (DN 65 to 150) and Series V 2001 Valves.

Actuator versions for central attachment using an M30 x 1.5 ring nut are preferably combined with Type 3214 (DN 125 to 150) and Series 240 Valves.

### 1.1 Additional equipment

The actuators can be equipped with additional units, such as limit switches and potentiometers, to influence the tasks of control systems.

In addition, the actuator can be equipped with a digital positioner for processing standard signals in the range of 0 (2) to 10 V or 4 (0) to 20 mA.

Refer to section 5 for details on retrofitting additional equipment.

---

#### **Note!**

*The device with a CE marking fulfils the requirements of the Directives 94/9/EC (ATEX) and 89/336/EEC (EMC).*

*The declaration of conformity can be viewed and downloaded on the Internet at <http://www.samson.de>.*

---

## 1.2 Technical data

Actuator	Type 3374	-10	-11	-15	-21	-26	-31	-36
Version with		Yoke		Ring nut	Yoke	Ring nut	Yoke	Ring nut
Fail-safe action		Without			Actuator stem extends		Actuator stem retracts	
Rated travel	mm	30	15	30/15	15			
Actuating time for rated travel	sec	240	120	240/120	120			
Actuating time for fail-safe action	sec	-			12			
Nominal thrust		2.5 kN Actuator stem extends and retracts			2 kN Actuator stem extends	0.5 kN Actuator stem retracts		
Power supply		207 V to 253 V; 50 Hz, 99 V to 121 V; 60 Hz or 21.6 V to 27.6 V; 50 Hz (other voltages on request)						
Power consumption	VA							
	Without positioner	7.5/13			10.5/16			
	With positioner	9.5/15			12.5/18			
Motor switch-off		Dependent on torque						
Rated temperature range		5 to 60 °C						
Storage temperature range		-20 to +70 °C						
Degree of protection		IP 54 acc. to IEC 529, (IP 65 with cable glands <sup>1)</sup> ) Suspended mounting not approved						
Overvoltage category		II						
Design and inspection		EN 61010, edition 3.94						
Class of protection		II						
Noise immunity		EN 50082 Part 2						
Noise emission		EN 50082 Part 1						
Manual override		Using hex wrench; no adjustment after fail-safe action has been triggered						
Weight approx.	kg	3.2	3.3	3.9	4.0	3.5	3.6	
Materials		Housing and cover of plastic (PPO glass fiber reinforced)						
<b>Additional electrical equipment</b>								
Limit switch		Two travel-dependent, adjustable limit switches; perm. load 250 V AC ; 3A						
Potentiometer <sup>2)</sup>		0 to 1000 Ω (0 to 900 Ω at rated travel), max. permissible current 1 mA						

<sup>1)</sup> Cable glands M20 x 1.5 with metal nut, width across flats (SW) 23/24

<sup>2)</sup> Not for version with positioner

Digital positioner <sup>1)</sup>				
		Operating mode 1	Operating mode 2	Operating mode 3
Input variable <sup>2)</sup>	Range	4...20 mA, R <sub>i</sub> = 0.05 kΩ 2...10 V, R <sub>i</sub> = 10 kΩ	0...20 mA, R <sub>i</sub> = 0.05 kΩ 0...10 V, R <sub>i</sub> = 10 kΩ	Acc. to predetermined values <sup>3)</sup>
	Resolution	10 bit		
Position feedback signal <sup>4)5)</sup>	Range	4...20 mA, R <sub>B</sub> ≤ 0.2 kΩ 2...10 V, R <sub>B</sub> ≥ 5 kΩ	0...20 mA, R <sub>B</sub> ≤ 0.2 kΩ 0...10 V, R <sub>B</sub> ≥ 5 kΩ	Acc. to predetermined values <sup>3)</sup>
	Resolution	8 bit		
Characteristic		Increasing, actuator stem retracts or extends as the input variable increases		Acc. to predetermined values <sup>3)</sup>
Travel	Adjustable	6 to 20 mm at rated travel 15 mm 6 to 35 mm at rated travel 30 mm (the travel range has been extended from 12 to 35 mm to 6 to 35 mm for rated travel 30 mm in positioner version V1.10 and higher)		
	Setting	With travel calibration button (1 mm each time the button is pressed)		Acc. to predetermined values <sup>3)</sup> , with button
1 binary input		Electrically isolated, switching voltage 18 to 30 VDC, approx. 7 mA		
1 binary output		Electrically isolated semiconductor contact, max. 45 V DC, min. 3 V DC, max. 25 mA		
Integrated interface for SAMSON memory pen/PC		Transfers data about settings, operating status and messages Transfer protocol: SAMSON SSP protocol		
Retrofittable bus interface		On request		
Total delay time		Approx. 30 ms		
Accuracy		≤ 2.5% without considering the dead band width		

<sup>1)</sup> Maximum two current inputs may be switched in series

<sup>2)</sup> Maximum values ±50 mA or ±25 V

<sup>3)</sup> SAMSON TROVIS-VIEW Configuration and Operator Interface software, SAMSON memory pen

<sup>4)</sup> Can only be taken from current or voltage signal

<sup>5)</sup> Not when retrofittable interface is used

## 2 Installation

### 2.1 Mounting position

Installation depends on the mounting position of the valve. However, do not install the actuator suspended downwards.

### 2.2 Attachment to the valve

**Series V 2001** (DN 15 to 80),

**Type 3260 Valves** (DN 65 to 150) and

**Type 3214 Valves** (DN 65 to 100)

1. Remove protective covers and unscrew nut (6) from the control valve.
2. Place actuator with yoke onto the valve and fasten with the nut (6, SW 36) using a min. tightening torque of 150 Nm. If necessary, retract actuator stem slightly beforehand using the manual override.
3. When the plug stem (5) fits closely onto the actuator stem (3), attach both coupling clamps (4) and fasten with screws.

#### **Series 240:**



1. Push plug stem down to close the valve.
2. Turn coupling nut (8) until a distance of  $x = 75$  mm ( $x = 90$  mm for DN 100 and larger) between the top of the yoke and the top of the coupling nut (8) is reached. Secure position with lock nut (9).
3. Place actuator onto valve bonnet (2.3) and fasten with ring nut (7).  
If necessary, retract actuator stem slightly beforehand using the manual override.

4. When the coupling nut (8) fits closely onto the actuator stem, attach both coupling clamps (4) and screw tight.
5. Move actuator stem (3) to the end position (valve closed) using the manual override or motor.
6. Align travel indicator scale (10) to the middle of the stem connector (4) and screw tight.


#### **Type 3214** (DN 125 to 150)

1. Place actuator onto the valve and secure with the ring nut (7). If necessary, retract actuator stem slightly beforehand using the manual override.
2. When the plug stem fits closely onto the actuator stem (3), attach both coupling clamps (4) and screw tight.
3. Move actuator stem (3) to the end position (valve closed) using the manual override or motor.
4. Align travel indicator scale (10) to the middle of the stem connector (4) and screw tight.

Attachment to Series V 2001,  
Type 3260 DN 65 to 150 and  
Type 3214 DN 65 to 100

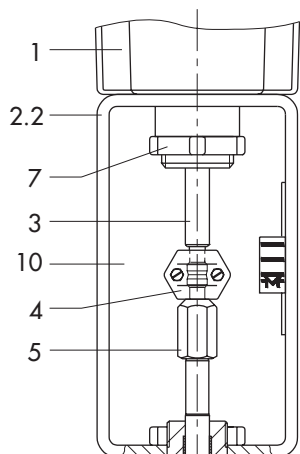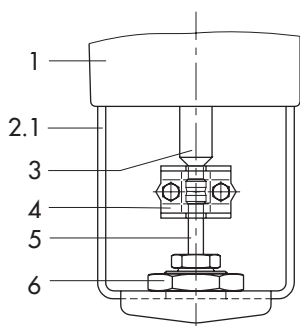

Attachment to Series 240

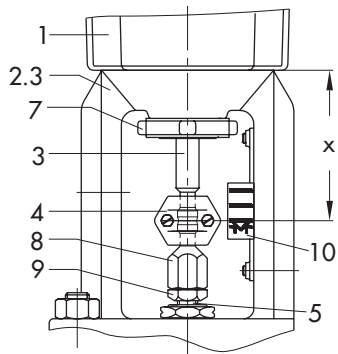

Attachment to Type 3214  
DN 125 to 150

- 1 Actuator
- 2.1 Actuator yoke
- 2.2 Valve yoke
- 2.3 Bonnet
- 3 Actuator stem
- 4 Stem connector
- 5 Plug stem
- 6 Nut
- 7 Ring nut
- 8 Coupling nut
- 9 Lock nut
- 10 Travel indicator scale

Fig. 2 · Attachment to the valve

### 3 Electrical connections



Upon installation of the electric connections, you are required to observe the regulations concerning electrical power plant systems according to DIN VDE 0100 as well as the regulations of your local power supplier.

Install electrical connections as indicated on the circuit diagram included in the actuator cover and as illustrated in Figs. 3 and 4. A maximum of 3 cable glands can be attached to the housing for cable entries.

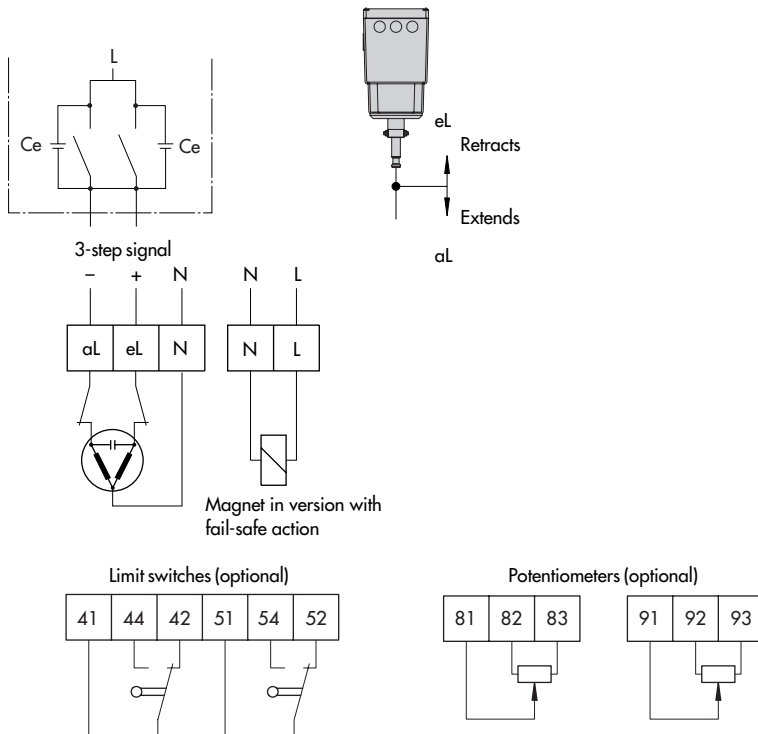


Fig. 3 · Terminal connections, version for three-step signal



**Warning!**

- ▶ Only connect to the main power network when the power is switched off.
- ▶ Only use power interruption devices which ensure that the power cannot be switched on again unintentionally.
- ▶ Particularly for 24 V, 50 Hz actuators, use wires with a sufficiently large cross-section to guarantee that the permissible voltage tolerances are not exceeded.

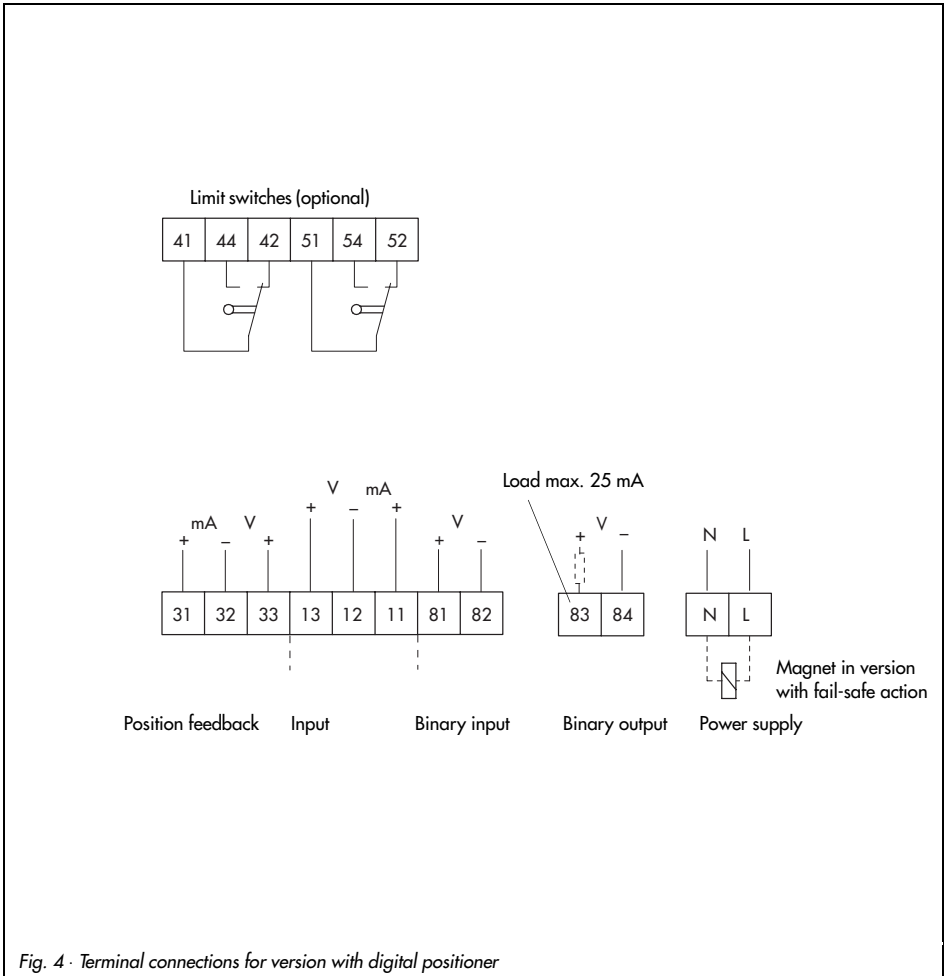


Fig. 4 · Terminal connections for version with digital positioner

### 4 Operation and adjustment

#### 4.1 Manual operation of the actuator

To operate the manual override, place 4 mm hex wrench on the red actuator shaft located at the side of the housing. The hex wrench is delivered with the actuator. It is attached to the bottom side of the housing.

#### 4.2 Adjustment of additional equipment

To access the additional equipment, unscrew the four fixing screws and take off the cover.



*Adjust while the power is switched on!*

---

#### 4.2.1 Limit switches


1. Use motor or manual override to move the control valve to the position where the switching function is to be activated.
2. Use hex wrench to turn spindle (2) for the upper limit switch or spindle (3) for the lower limit switch until the associated contact cam on the cam bracket (7) triggers the switch contact of the upper or lower microswitch (1).

#### 4.2.2 Potentiometers

The gears of the potentiometers (12) and (13) must be put onto their shafts corresponding with the rated travel of the control valve. The rated travel inscription "Nennhub 15" or "Nennhub 30" must be legible. If this is not the case, pull each potentiometer gear off the shaft and put it back on again with the reverse side of the wheel facing upwards, ensuring it is aligned roughly flush with the potentiometer shaft.

#### Zero point adjustment

1. Use motor or manual override to move the control valve to the desired end position.
2. Place screwdriver on the slotted potentiometer shaft (12.1 and 13.1).
3. Adjust resistance value with a connected ohmmeter by turning the corresponding potentiometer shaft.

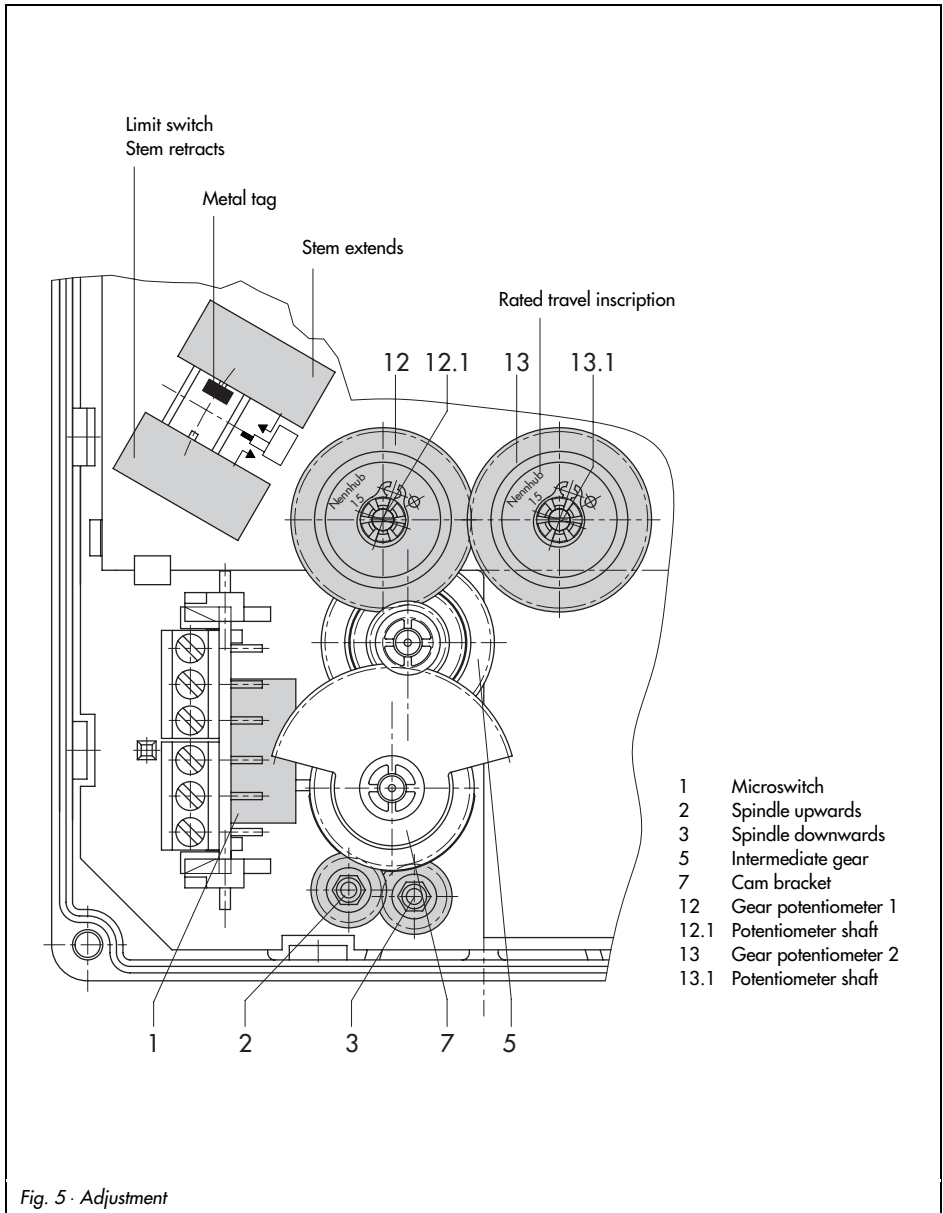


### 4.3 Setting the digital positioner


In the actuator version with digital positioner, the travel is calibrated automatically, so that the travel (controlled variable  $x$ ) and the input signal (reference variable  $w$ ) of the positioner can be matched in the best possible way.

Additionally, the digital positioner provides valve position feedback for remote transmission.

Adjustment and start-up can be carried out using four different operating modes. Operating modes **1** and **2** work with set data stored in the positioner's memory. The user only needs to select the operating mode via the selector switch (2) and press the button (4) to start travel calibration.

#### **Note!**


Setup with operating modes **3** and **0** =  can only be performed using a SAMSON memory pen as storage medium, or in connection with SAMSON's TROVIS-VIEW Configuration and Operator Interface software and a PC or bus system.

Setup with operating modes **3** and **0** =  is described in Mounting and Operating Instructions **EB 8331-2 EN**.

#### **Settings for operating modes 1 and 2**

Increasing characteristic: actuator stem retracts or extends as the reference variable increases.

After the actuator has been mounted on the valve as described in section 2.2 and the electrical connections have been installed as described in section 3, proceed as follows:

1. Set selector switch (2) with the arrow pointing to operating mode **0** =  (control switched off).
2. Check mounting position of the potentiometer gear (12).

The gear must be put onto the potentiometer shaft to correspond with the rated travel of the control valve.

The inscription

**Nennhub 15** (for 6 to 20 mm travel) or **Nennhub 30** (for 6 to 35 mm travel) must be legible from above on the associated gear side.

If this is not the case, pull the gear off the shaft and put it back on again with the reverse side facing upwards, allowing the intermediate gear to engage properly.

---

**Note!** Actuators with fail-safe action "Actuator stem retracts" or "extends" are only designed for a rated travel of 15 mm. Do not rearrange the gear!

---

Make sure that the shaft of the potentiometer (12) is adjusted correctly.

3. Switch on auxiliary power and set the reference variable to a value  $> 4$  mA.
4. Set selector switch (2) with the arrow pointing to operating mode **1** for 4 to 20 mA or 2 to 10 V input and alarm signal, or set it to operating mode **2** for 0 to 20 mA or 0 to 10 V input and alarm signal.
5. Press button (4) to start travel calibration.

Press the button shortly to adjust the travel for the valve closing position with **extending** actuator stem.

Hold the button pressed for longer than 3 seconds (indicated by switchover from signal lamp 8 to signal lamp 9) to adjust the travel for the valve closing position with **retracting** actuator stem.



**Caution!**

The automatic travel calibration lasts approximately twice as long as the actuator's transit time. During this period, the valve leaves its current position. Calibrate the travel either on the test bench or when the shut-off valves in the plant are closed.

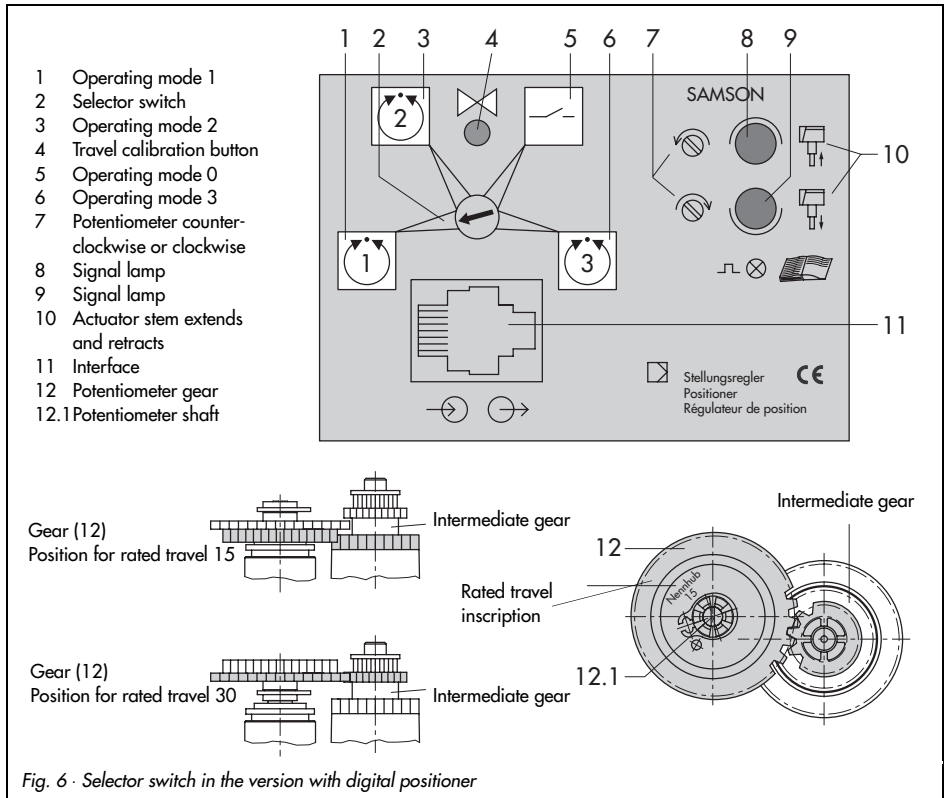


Fig. 6 · Selector switch in the version with digital positioner

After pressing the calibration button (4), the actuator stem first extends to the closing position of the valve as far as it will go. Calibration is concluded when both signal lamps (8 and 9) are lit.

Travel calibration starts after the mounting position of the potentiometer gear (12) was determined automatically. This is indicated by signal lamp (8) for 6 to 35 mm travel and by signal lamp (9) for 6 to 20 mm travel.

When travel calibration starts, the lower signal lamp (9) blinks quickly for about 10 seconds.

The actuator stem retracts as far as it will go (maximum travel - valve open).

Travel calibration is concluded when the end position is reached. The actuator is in control operation. The actuator stem moves to the valve position determined by the reference variable.

---

### **Note!**

*If one of the signal lamps starts to blink slowly after the travel calibration button was pressed and the actuator stem has extended to its closing position, the potentiometer (13) has been wrongly positioned. Readjust it manually.*

---

Do not adjust the potentiometer before the closing position is actually reached. This is indicated by the associated, activated limit switch on the board (Fig. 5 on page 11).

To proceed, adjust the shaft of the potentiometer (13) by turning it gradually clockwise or counterclockwise with a screwdriver until the signal lamp stops blinking and is constantly illuminated.

Turn the screwdriver counterclockwise if the upper signal lamp (8) blinks, and clockwise if the lower signal lamp (9) blinks, corresponding to the icons (7).

Travel calibration does not continue before both signal lamps are illuminated at the same time.

---

### **Note!**

*If both signal lamps start to blink simultaneously during travel calibration, interrupt calibration by pressing the travel calibration button (4) and check the mounting position of the potentiometer gear (12) again.*

*If no travel motion can be determined during calibration, e.g. due to a loose or missing potentiometer gear, both signal lamps blink alternately.*

*If this is the case, interrupt travel calibration by pressing the button (4), correct the error, and restart calibration by pressing the button (4) again.*

---

### Setting with limited travel range

Travel calibration is usually based on the maximum travel of the control valve.

If, however, the maximum possible travel is to be limited to a smaller travel end value, press the button (4) once at the start of calibration while the signal lamp blinks for 10 seconds.

As a result, travel calibration via the potentiometer gear with rated travel 15 or 30 is limited to 6 mm.

Each pressing of the button further increases the travel range by 1 mm.

If, for example, a control valve designed for 15 mm is to be operated with a limited travel range of 10 mm, press the button (4) 5 times during the 10 second time limit. The top signal lamp (8) flashes each time the key is pressed.

### Reporting defined events

At the binary output (terminal 83 and 84), predefined events can be indicated (see EB 8331-2 EN) during positioner operation and transmitted to a control room.

## 5 Retrofitting additional electrical equipment

The actuator can be subsequently equipped with two limit switches, two potentiometers or a digital positioner.

Depending on the actuator version used, the actuator board needs to be replaced as well.

The actuator version is marked on the nameplate, e.g. **Model 3374-11000002000**.

When ordering additional electrical equipment from the manufacturer make sure to include this model number in the order.



#### **Caution!**

*When installing electrical accessories, make sure the supply voltage and the signal input are disconnected.*

*Only use power interruption devices which are protected against unintentional reconnection of the power supply.*

#### **Note!**

*It is recommendable to slightly apply lubricant (e.g. Vaseline) to the spindles on the gear faces and to the sides of the cogs.*

---


## 5.1 Limit switches

The retrofit kit (order no. **1400-8830**) is required to install limit switches. If the actuator is not already equipped with potentiometers or a positioner, the basic unit (order no. **1400-8829**) is also required. The unit includes the spindle gear (2) and the intermediate gear (5).

**Note!** To mount the limit switches, the actuator stem must be in end position, i.e. the stem must be either fully extended or fully retracted. If necessary, move the stem to the appropriate position with the manual override on the side.

1. Remove the fastening screws. Push the actuator board (1) from its guiding to the right. Slightly lift the board and continue pushing it further towards the cable entry.
  2. Clip the spindle gear (2) onto the sleeve (3). Make sure the lateral latch is properly engaged in the groove of the sleeve.
  3. Plug intermediate gear (5) onto the spindle (4). Place the serrated ring (10) on top and push it down until it will not go any further.
  4. Equip each of the two contact cams (6) with a retaining ring. Make sure that the ring is inserted in the groove. The opening of the retaining ring must point towards the center of the face of the contact cam with the larger radius. To ensure that the ring is clamped in tightly, press both ears of the retaining ring together with flat tongs.
  5. Plug both premounted contact cams (6) ring gear first onto the cam bracket (7).
  6. Push adjustment gears (8) onto their spindles and fasten with one screw each.  
Check whether the adjustment screws can be turned easily. If not, slightly loosen the screw again.
  7. Turn both contact cams (6) as illustrated in Fig. 7.1 corresponding with the position of the actuator stem on the cam bracket (7).
  8. Push the spacer (9) onto the spindle for the cam bracket. Push the cam bracket with both cams onto the spindle corresponding with the position of the actuator stem as illustrated in Fig. 7.2.  
Make sure that the outermost cog of the cam bracket (7) engages in the gear-wheel of the intermediate gear (5). In addition, the adjustment gears (8) must engage properly in the corresponding gears of the contact cams (6).
  9. Secure the cam bracket (7) with the serrated ring (10), pushing the ring down until it will not go any further.
  10. Position the terminal board (11) at the base of the support at a 45° angle (approx.) with the switches facing towards the gears. Push the upper end of the terminal board towards the gears until the board is in a vertical position and properly engaged in the support.
  11. Push the actuator board (1) back into its guiding. Make sure that the gears are properly engaged. Fasten the board using screws.
- Adjust limit switches as described in section 4.2.1.



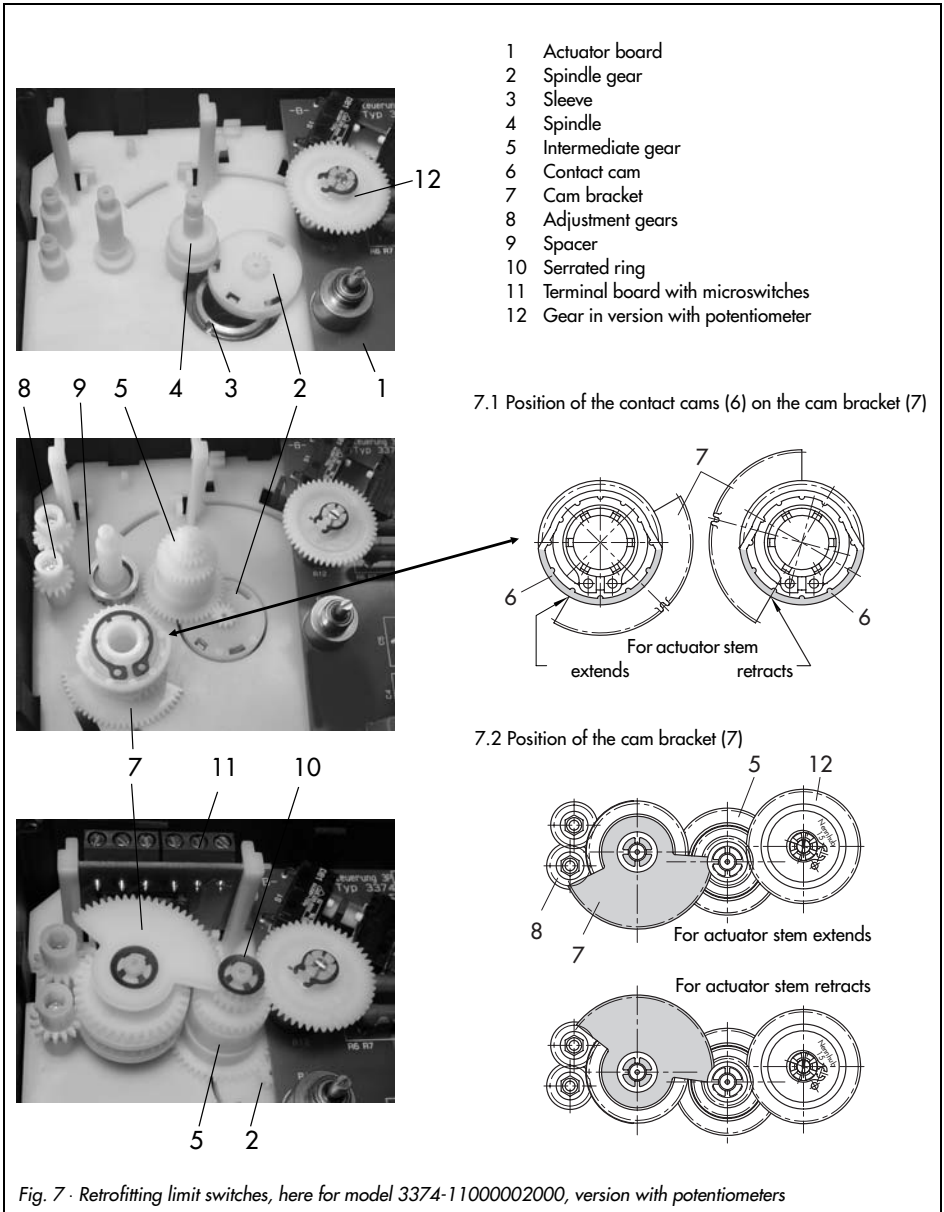

## 5.2 Potentiometers

Actuators with a digital positioner cannot be equipped with potentiometers!

To retrofit the potentiometers, an actuator board with the appropriate potentiometers and gears (12 and 13) is required.

If the actuator is not already equipped with limit switches, the basic unit (order no. **1400-8829**) is also required. The unit includes the spindle gear (2) and the intermediate gear (5).

1. Remove the fastening screws. Push the actuator board (1) from its guiding to the right. Take out the board and replace it with a board with potentiometers.

2. Clip the spindle gear (2) onto the sleeve (3) as illustrated in Fig. 7, top. Make sure the lateral latch is properly engaged in the groove of the sleeve.
3. Plug intermediate gear (5) onto the spindle (4). Place the serrated ring (10) on top and push it down until it will not go any further.
4. The potentiometer gears (12 and 13) with retaining rings must be put onto their shafts corresponding with the rated travel of the control valve. The rated travel inscription "Nennhub 15" (on the upper side with the retaining ring) or "Nennhub 30" (lower side) must be legible from above (also see Figs. 4 and 5).
5. Push the actuator board back into its guiding. Make sure that the gears are properly engaged. Fasten the board using screws.

► Adjust the potentiometer as described in section 4.2.2.

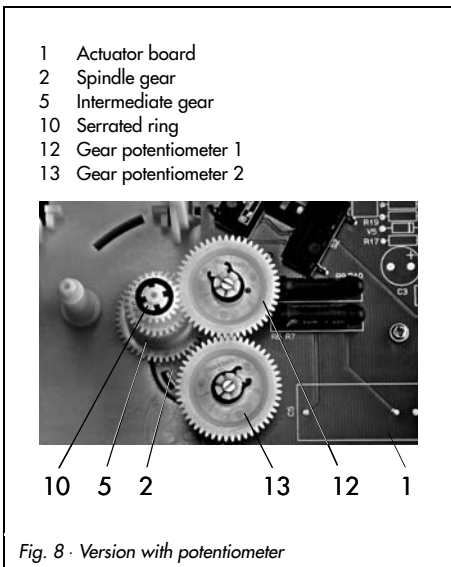


Fig. 8 · Version with potentiometer

### 5.3 Digital positioner

An appropriate actuator board, TROVISVIEW software for 3374 as well as a connecting cable (order no. 0450-1978) are required to retrofit the digital positioner.

If the actuator is not already equipped with limit switches, the basic unit (order no. **1400-8829**) is also required. The unit includes the spindle gear (2) and the intermediate gear (5).

**Note!** Actuators with a digital positioner cannot be equipped with potentiometers!

1. Remove the fastening screws. Push the actuator board (1) from its guiding to the right. Take out the board and replace it with a board with positioner.
2. Clip the spindle gear (2) onto the sleeve (3) as illustrated in Fig. 7, top. Make sure the lateral latch is properly engaged in the groove of the sleeve.
3. Plug intermediate gear (5) onto the spindle (4). Place the serrated ring (10) on top and push it down until it will not go any further.
4. The gear (12) on the feedback potentiometer, which is equipped with a retaining ring, must be put onto its shaft corresponding with the rated travel of the control valve.

The rated travel inscription "Nennhub 15" (on the upper side with the retaining ring) or "Nennhub 30" (lower side) must be legible from above (also see Figs. 4 and 5).

5. Push the actuator board (1) back into its guiding. Make sure that the gears are properly engaged. Fasten the board using screws.
  6. To calibrate the positioner, proceed as described in section 4 of EB 8331-2 EN.
- Adjust the positioner as described in section 4.3.

- |    |                             |
|----|-----------------------------|
| 5  | Intermediate gear           |
| 6  | Contact cam                 |
| 7  | Cam bracket                 |
| 8  | Adjustment gears            |
| 10 | Serrated ring               |
| 12 | Gear feedback potentiometer |



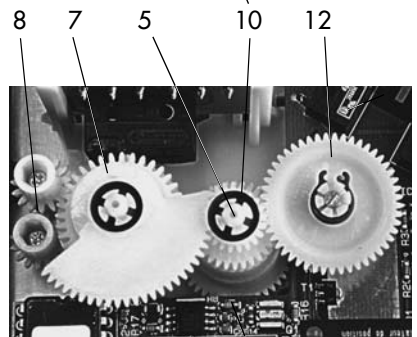



Fig. 9 · Version with positioner,  
top: without; bottom: with limit switches

## 6 Dimensions in mm

Version with yoke

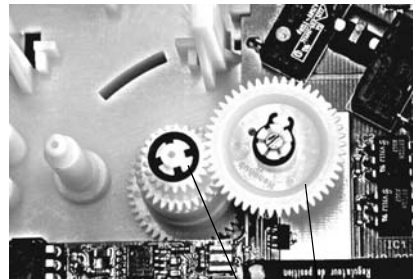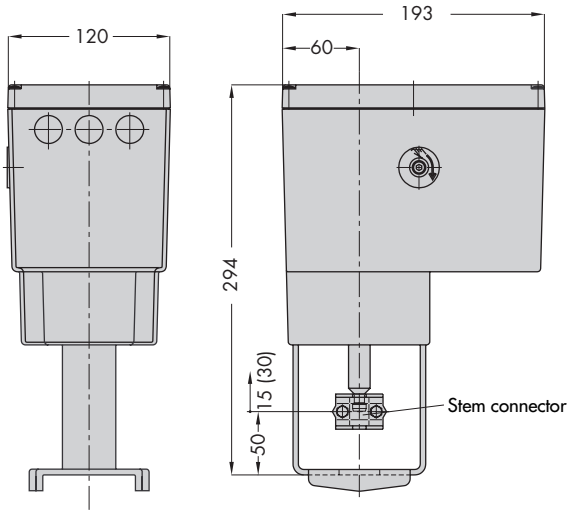

Version with ring nut

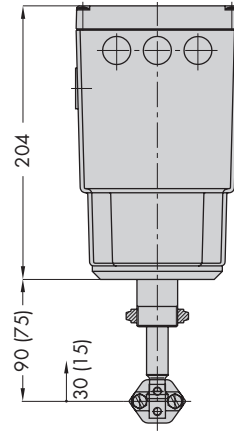





SAMSON AG · MESS- UND REGELTECHNIK  
Weismüllerstraße 3 · 60314 Frankfurt am Main · Germany  
Phone: +49 69 4009-0 · Fax: +49 69 4009-1507  
Internet: <http://www.samson.de>

**EB 8331-1 EN**

S/Z 2004-03